



ELECTRIC CHAINSAW CHAIN SHARPENER

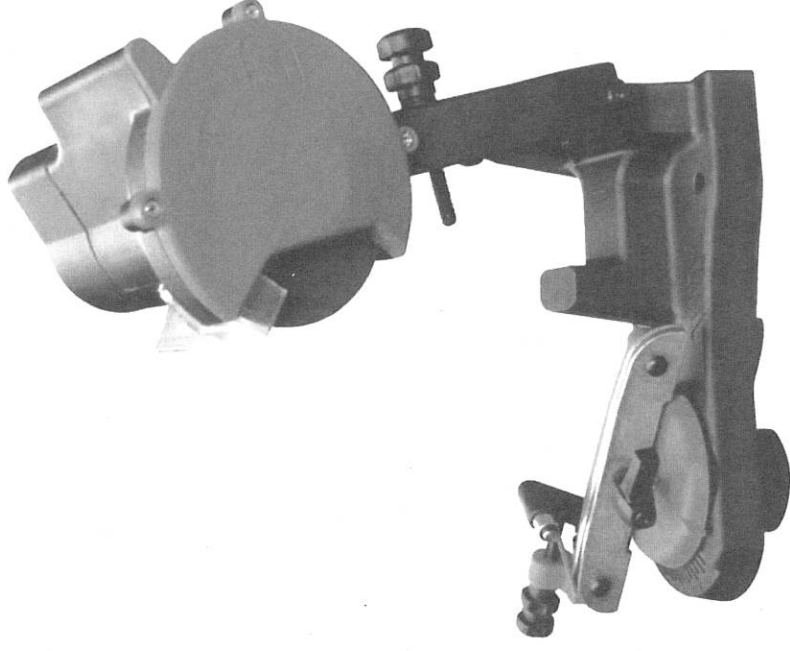

**ASSEMBLY AND OPERATING
INSTRUCTIONS**

Assembly Drawing

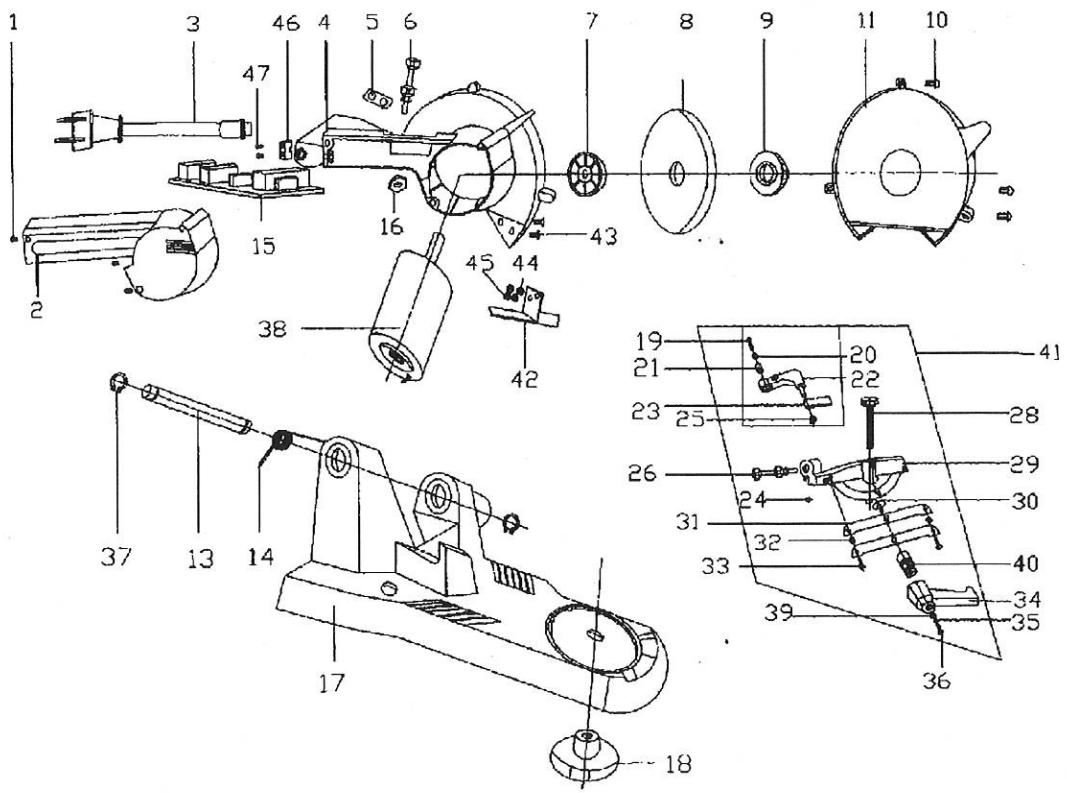

Specifications

Motor	230V,50Hz,85Watts
Rpm's	4800
Vise Capacity	0.80" to 0.50"
Table/Vise Angles	35 Degrees Right to Left
Arbor Diameter	7/8"
Wheel Dimensions	4-1/4" Dia. X 1/8" Thick
Overall Dimensions	9"W x 10"L x 12-1/8"H
Weight	4.85Lbs

Save This manual

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep the manual in a safe and dry place for future reference.

Safety Warnings and Precautions

WARNING: When using tools, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this tool !

1. **Keep work area clean.** Cluttered areas invite injuries.
2. **Observe work area conditions.** Do not use machines or power tools in damp or wet locations. Don't expose to rain. Keep work area well lighted. Do not use electrically powered tools in the presence of flammable gasses or liquids.
3. **Keep children away.** Children must never be allowed in the work area. Do not let them handle machines, tools, or extension cords.
4. **Store idle equipment.** When not in use, tools must be stored in a dry location to inhibit rust. Always lock up tools and keep out of reach of children.
5. **Use the right tool for the job.** Do not attempt to force a small tool or attachment to do the work of a larger industrial tool. There are certain applications for which this tool was designed. It will do the job better and more safely at the rate for which it was intended. Do not modify this tool and do not use this tool for a purpose for which it was not intended.
6. **Dress properly.** Do not wear loose clothing or jewelry as they can be caught in moving parts. Protective, electrically non-conductive clothes and no-skid footwear are recommended when working. Wear restrictive hair covering to contain long hair
7. **Use eye and ear protection.** Always wear ANSI approved impact safety goggles. Wear a full face shield if you are producing metal filings or wood chips.
8. **Do not overreach.** Keep proper footing and balance at all times. Do not reach over or across running machines.

Parts List

Part #	Description	QTY.	Part #	Description	QTY.
1	Screw	3	24*	Tension Spring	1
2	Motor Cover	1	25*	Retaining Ring	1
3	Power Cord	1	26*	Lower Knob	1
4	Top Housing	1	27*	Screw	1
5	Switch Plate	1	28*	Bolt	1
6	Lock Stop	1	29*	Chain Saw Frame	1
7	Grinding Wheel Base	1	30*	Square Neck Screw	2
8	Grinding Wheel	1	31*	Sliding Guide	2
9	Grinder Lock Cap	1	32*	Pad	2
10	Screw	2	33*	Screw	1
11	Grinding Wheel Cover	1	34*	Handle	1
13	Punching Axis	1	35*	Spring	1
14	Torsion Spring	1	36*	Lock Screw	1
15	Switch Circuit Board	1	37*	Retaining Ring (10)	2
16	Nut	1	38*	Motor	1
17	Base	1	39*	Washer	1
18	Lock Wheel	1	40*	Nut	1
19*	Screw	1	42*	Safe Guard	1
20*	Washer	1	43*	Screw	2
21*	Bearing	1	44*	Spring Washer	2
22*	Swing Arm	1	45*	Nut	2
23*	Chain Stop	1	46*	Pressure Panel	1
			47*	Screw	2

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURE AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS. THERE TO OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERE TO

NOTE: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts. Parts maybe changed with or without notice for improvement.

9. **Maintain tools with care.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have them repaired by an authorized technician. The handles must be kept clean, dry, and free from oil and grease at all times.
 10. **Avoid unintentional starting.** Be sure the switch is in the Off position when not in use and before plugging in.
 11. **Stay alert.** Watch what you are doing, use common sense. Do not operate any tool when you are tired.
 12. **Check for damaged parts.** Before using any tool, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment and binding of moving parts; any broken parts or mounting fixtures; and any other condition that may affect proper operation. Any part that is damaged should be properly repaired or replaced by a qualified technician. Do not use the tool if any switch does not turn On and Off properly.
 13. **Guard against electric shock.** Prevent body contact with grounded surfaces such as pipes, radiators, ranges, and refrigerator enclosures.
 14. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with tool.
 15. **Do not operate tool if under the influence of alcohol or drugs.** Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not operate the tool.
 16. **Use proper size and type extension cord.** If an extension cord is required, it must be of the proper size and type to supply the correct current to the tool without heating up. Otherwise, the extension cord could melt and catch fire, or cause electrical damage to the tool. This tool requires use of an extension cord of **0 to 10 amps** capability (up to 50 feet), with wire size rated at **18 AWG**. Longer extension cords require larger size wire. If you are using the tool outdoors, use an extension cord rated for outdoor use.
 17. **Maintenance.** For your safety, maintenance should be performed regularly by a qualified technician.
 18. Never use the Electric Chainsaw Sharpener around flammable materials.
- Note:** Performance of this tool (if powered by line voltage) may vary depending on variations in local line voltage. Extension cord usage may also affect tool performance.
- Warning:** The warnings, cautions, and instructions discussed in this instruction discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator of the tool.

Operation(continued)

5. After you finished sharpening all of the teeth on the chain, turn off the machine by pushing the red button on the **Switch Plate(#5)** and unplug the unit.
6. Loosen the **Lock Wheel(#18)** and reset the angle so that the first tooth that hasn't been sharpened is positioned against the **Chain Stop (#23)** and locked in as explained on page 6. See **FIGURE 11**.
7. As you did with the first half of the chain, be sure to lower the **Top Housing(#4)** so that the **Grinding Wheel (#8)** skims the chain tooth, and lock it in place. See page6. Follow all of the steps on page 6 double checking everything before you plug in the machine and turn it on again.

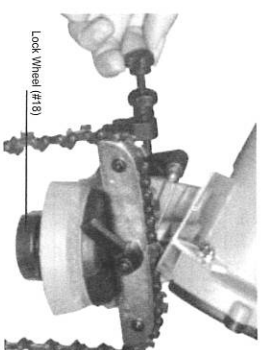


FIGURE 11

- Remember to turn off the machine and unplug it if you need to make any adjustments.**
8. After you repeat all of the steps under sharpening on page7, your chain is ready to be mounted on your saw.

Maintenance

1. Keep the Sharpener clean and free of dust, metal debris and dirt.
2. Check the grinding wheel before each use to make sure it isn't damaged. Do not use a grinding wheel if it is chipped, cracked, or worn. You can check if the wheel has cracks not visible to the human eye by hanging it up by the central hole and tapping it with a non metal object (ie: screwdriver handle). If it is in good condition it will produce a metallic sound. A dull sound indicates a crack or break.
3. Replace the grinding wheel when it grinds down to a diameter of 3 inches.

Operation (continued)

8. Lock the chain in the **Sliding Guides (#31)** by turning the **Handle (#34)**. See **FIGURE 8**. The **Handle (#34)** should be situated so that you can easily release and tighten it. You will need to release it each time you move to the next link, and tighten it to sharpen each link.

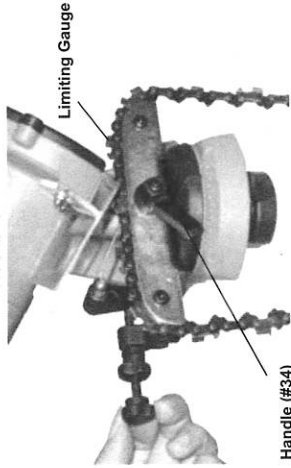


FIGURE 8

9. If the chain has been repeatedly sharpened, the chain depth limiting gauges may need to be taken down with a flat file (not included). See **FIGURES 8 & 9**. File down each gauge so that they are at a lower level than cutting teeth.

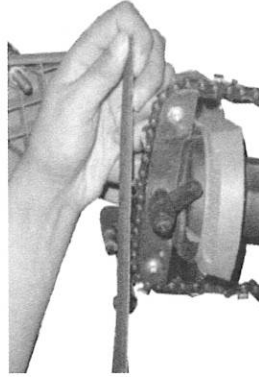


FIGURE 9

Sharpening.

1. Put on your protective gear and make sure the immediate area is clear of bystanders.
2. Plug in the **Power Cord (#3)** and press the green button on the **Switch Plate (#5)** to turn on the machine.
3. Slowly lower the grinding wheel as shown in **FIGURE 10**. If you notice slight errors in your settings, turn off the unit and unplug it before you make your adjustments.

Note: A good grind occurs when the contact between the wheel and the teeth are gradual and smooth. Do not stop too long time on each tooth.

4. After sharpening one tooth, turn off the machine. Lift the **Top Housing (#4)**, release the **Handle (#34)**, and move the chain so that the next link is positioned in the **Chain Stop (#23)**. Tighten the **Handle (#23)**. Turn the machine back on and continue sharpening the next tooth. Repeat this process until you have sharpened all of the links set up for this angle.

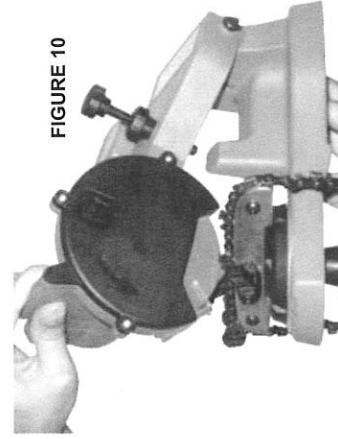


FIGURE 10

Additional Safety Warnings

Grinding Wheel Warnings

1. Do not use a grinding wheel if it is chipped, cracked, or worn. You can check if the wheel has cracks not visible to the human eye by hanging it up by the central hole and tapping it with a non-metal object (ie: screwdriver handle). If it is in good condition it will produce a metallic sound. A dull sound indicates a crack or break.
 2. Only use grinding wheels that fit the arbor (7/8"). Do not try to change or modify the mounting hole on a grinding wheel to make it fit.
 3. Do not over-tighten the **Grinder Lock Cap (#9)**. Hand tighten it only. Over-tightening may cause the wheel to break or disintegrate.
 4. Never use the chain saw sharpener without the **Grinding Wheel Cover (#11)** in place.
 5. Always test the **Grinding Wheel (#8)** by running it for a minute prior to contact with a chain.
 6. Keep away from the wheel when it is turning, and make sure no one is standing close, in the line of the wheel rotation trajectory.
 7. If the grinding wheel vibrates, turn off the machine immediately and check that it is mounted securely, and that is not damaged.
 8. Never try to stop the grinding wheel with your hands, even if you are wearing safety gloves. The wheel will cut through gloves and your hand, causing serious injury.
 9. Never operate tool without the **Grinding Wheel Cover** in place.
 10. Replacement grinding wheel listed speed must meet or exceed RPM rating of the tool.
- Warning!:** This machine is designed to sharpen chain saw chains. Do not attempt to sharpen any other tools and do not attempt to grind any other objects.

Unpacking

When unpacking, check to make sure the parts listed on page 9 are included.

Assembly

1. When installing the sharpener on a workbench, make sure that the **lock wheel (#18)** (is accessible as shown in the mounting picture in **FIGURE 1**).
2. Bolt (bolts not included) the unit directly to the workbench through the two 1/4" holes on the **base (#17)**. The workbench must have a solid surface capable of supporting the weight of this sharpener, the work-piece and assorted tools. See **FIGURE 2**.

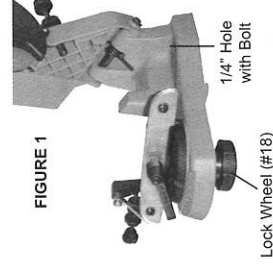


FIGURE 1

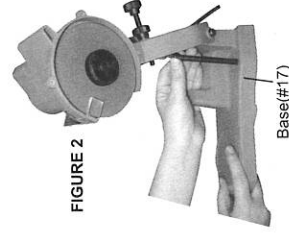


FIGURE 2

Warning ! Always unplug the unit before changing grinding wheels, or when making any adjustments to the Sharpener.

Mounting a Grinding Wheel

Refer to the assembly drawing on page 10 and FIGURE 3 and FIGURE 4 below.

1. Raise the **Top Housing (#4)** and lock it in the up position by tightening the **Lock Stop (#6)**
2. Remove the two screws holding the **Grinding Wheel Cover (#11)**. Set the cover aside.
3. Unscrew the **Grinder Lock Cap (#9)** that holds the **Grinding Wheel (#8)** in place.
4. Install the new wheel on the **Grinding Wheel Base (#7)**, making sure it fits properly.

Note : Do not use a grinding wheel if it chipped, cracked, or worn. You can check if the wheel has cracks not visible to the human eye by hanging it up by the central hole and tapping it with a non metal object (ie: screwdriver handle), if it is in good condition it will produce a metallic sound. A dull sound indicates a crack or break.

5. Replace the **Grinder Lock Cap (#9)**.
6. Replace the **Grinding Wheel Cover (#11)**.
7. Release the **Lock Stop (#6)** and lower the **Top Housing (#4)**.
8. Never operate tool without the Grinding Wheel Cover in place.

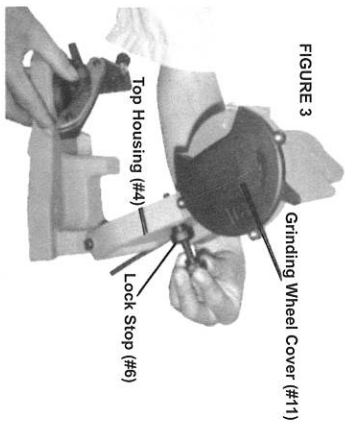


FIGURE 3 Grinding Wheel Cover (#11)

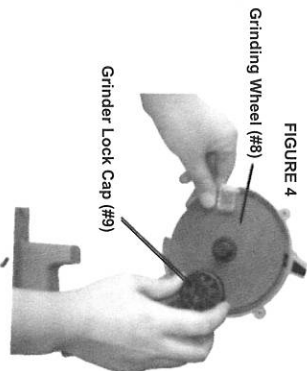


FIGURE 4

Warning ! Always unplug the unit while adjusting chain to be sharpened.

Operation

Refer to the assembly drawing on page 10 and the various photographs.

Note: Raised the **Top Housing (#4)** while adjusting the chain.

1. Clean the chain before sharpening it. Wash it with a non-flammable solvent. Don't not use Gasoline to dry the chain.

Operation (continued)

2. Lift up the **Chain Stop(#23)** and secure the chain in the **sliding Guides (#31)**. See FIGURE 6.
3. Lower the **Chain Stop(#23)** so that it is positioned on the tooth (blade) you want to start with. See FIGURE 5.

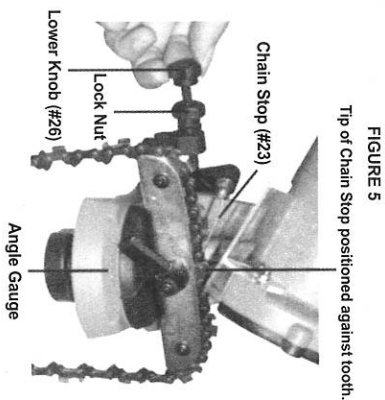


FIGURE 5

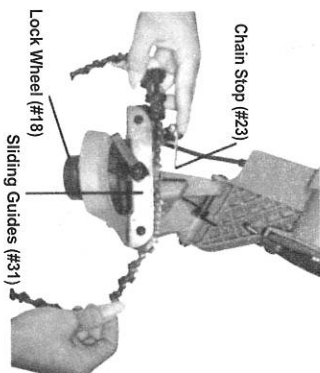


FIGURE 6

4. See FIGURES 5&6. Loosen the **LOCK Wheel (#18)** to allow entire housing to turn. Rotate the housing to match the degree of angle you need on the Angle Gauge. Chains come in various sizes with varying degrees of sharpening angles. Check with your chain manufacturer's manual to determine what degree you need to sharpen at. Once the degree is set, tighten the **Lock Wheel(#18)**.
5. Lower the **Top Housing(#4)** so that the **Grinding Wheel(#8)** skins the chain tooth.

6. Hold it at that position while you tighten the **Lock Stop(#6)** so that the Wheel will only go down to that point. See FIGURE 7.
7. Depending on the amount of material you wish to remove, tighten or loosen the **Lower Knob(#26)** and set the **Lock Nut**. See FIGURES The **Lower Knob (26)** has a Lock Nut, which will determine how much material is removed. Once you set the **Lock Nut**, fully tighten the **Lower Knob(26)**.

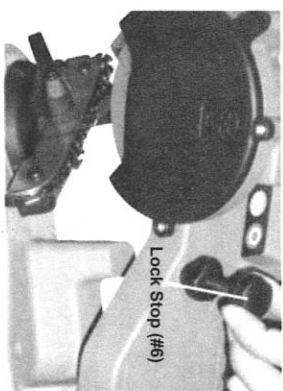


FIGURE 7