

to protect the paint.

MKS M8	6
Nut M8	4
Screw M8x20	6
Screw M8x10	6
Washer 10,5x22x2	6
Washer 8,4x16x1,51	4
Plastic pipe	4



M6 Screw to adjust the table's angle. Place something between the screw and the machine plate while adjusting Untighten the M6 adjust screw a few turns when the M8 screws are tightened.

> 1. Align the feeding table to the cast iron table at its top mount. 2.Adjust the table's angle.